

# Premier

Color Collection by FinishWorks

## Producing the Perfect Sample.

Wood preparation is a very important part of achieving a high quality finished product. Following these simple instructions will ensure a consistent finish and avoid problems in the future.



## SANDING



All sample stock for the Premier Collection was prepped using the following method.

All stock was Wide Belt sanded to a #180 grit. (figure 1)

All stock was then orbital sanded using a Dynabrade orbital sander and 3-M, 415U, #180 grit Silicone Carbide sandpaper. (figure 2)





## APPLYING THE STAIN

All stains should be applied using "spray on" application (figure 3). Allow the stain to penetrate 30 - 60 seconds before wiping.

Always wipe the stain with a used rag and wipe with grain (figure 4).

Allow stain to **dry at least 1 hour** before applying sealer and topcoat.

All samples in the Premier Collection have a "Conversion Varnish" finish system applied.

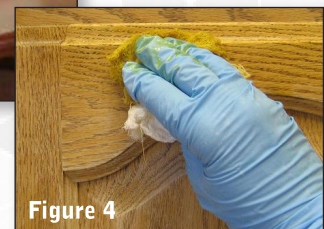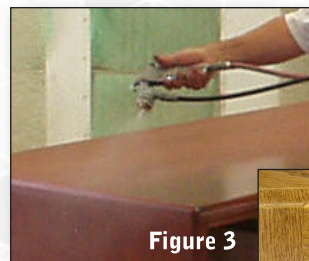

For more information please call:

 **FINISHWORKS®**